


trodat® NEW STYLE PAD




Finger grips snap off for old style Printy

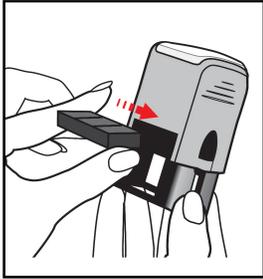

Insert the ink pad (ink side down). Push pad into machine using the finger grips on the pad.



NEW TRODAT PRINTY

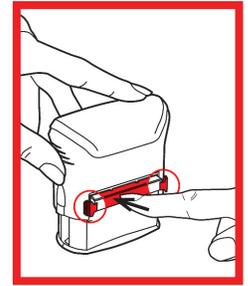

Insert the ink pad (ink side down). Push pad in until the finger grips break off.




OLD STYLE PRINTY



PRINTY_

Pad-Changing

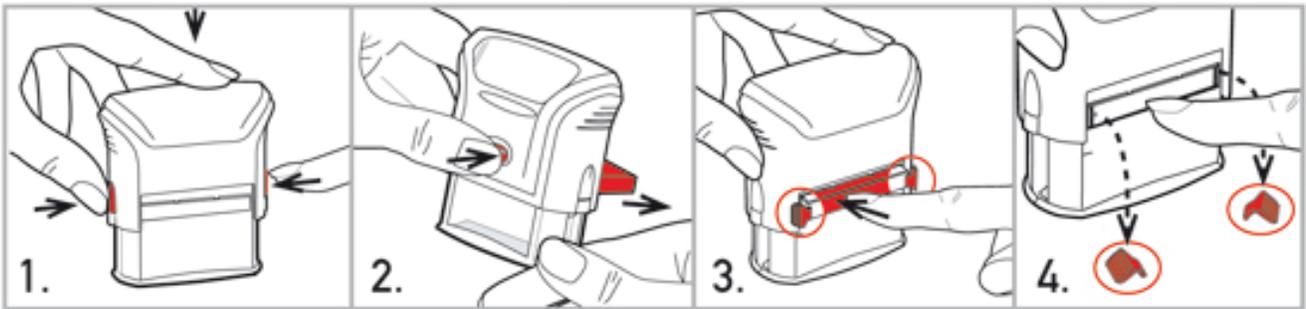

PRINTY_

